

		Canon DSLR Cameras					
Lensbaby Lens	Rebel Series	1D/ 1DMKiiN/ 1Dx/ 1DxMKii 5D/ 5DMKii/ 5DMKiii/ 5D MKiv / 5DS/ 5DSr		10D	50D	100D	
	KISS Series	6D	7D/ 7DMKii	20D	60D	300D	500D
				20Da	60Da	350D	550D
				30D	70D	400D	700D
				40D	80D	450D	1000D
Velvet 56 SE	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Velvet 56	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Circular Fisheye	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A	
Twist 60	Not Recommended	Canon EF - AP/ M	Not Recommended	Not Recommended	Not Recommended	Not Recommended	
Composer Pro II with Sweet 35 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer Pro II with Sweet 50 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer Pro II with Edge 50 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer Pro II with Edge 80 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Spark	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
<b>Discontinued</b>							
Composer Pro with Sweet 35 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer Pro with Sweet 50 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer Pro with Edge 80 Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer Pro with Double Glass Optic	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Muse	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Scout	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Control Freak	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	Canon EF - AP/ M	
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

**Nikon DSLR Cameras**

Lensbaby Lens	D40	D3000	D5000					
	D40x D70s	D3100 D5100	D7000	D200	D300	D3/ D3x/ D3s	D600 D800	Df
	D50 D80	D3200 D5200	D7100	D300s	D4/ D4s	D610 D800e	D700 D810	
	D70 D100	D3400 D5500	D7200	D500	D5	D750 D810a		
Velvet 56 SE	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Velvet 56	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Circular Fisheye	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Twist 60	Not Recommended	Not Recommended	Not Recommended	Not Recommended	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Sweet 35 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Sweet 50 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Edge 50 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro II with Edge 80 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Spark	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
<b>Discontinued</b>								
Composer Pro with Sweet 35 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro with Sweet 50 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro with Edge 80 Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer Pro with Double Glass Optic	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Muse	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Scout	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Control Freak	Nikon F - M	Nikon F - M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M	Nikon F - AP/ M
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

**Sony Alpha A DSRL Cameras**

Lensbaby Lens	A390		A100		A330		A500		A58*		Dynax Series* Maxxum Series* xi Series* si Series* I Series*	RD-175
	A700*	A450	A560*	A200	A350	A550	A700	A33*	A65*			
	A850	A500	A560L*	A230	A380	A560	A850	A37*	A77*			
	A900	A550	A580L*	A290	A390	A580	A900	A35*	A77ii*			
	A99*	A99ii*	A300	A450	A580	A900	A57*	A99ii*				
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Velvet 56	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Circular Fisheye	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Twist 60	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer Pro II with Sweet 50 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer Pro II with Edge 50 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
<b>Discontinued</b>												
Composer Pro with Sweet 35 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer Pro with Sweet 50 Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Muse	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Scout	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Control Freak	Sony Alpha A - AP/ M	Sony Alpha A - AP/ M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M	Sony Alpha A - M
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

\* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.