

Olympus 4/3 DSLR Cameras

	E5 E3 E30	E420 E450	E500 E510 E520	E600 E620
Lensbaby Lens				
Velvet 56 SE	N/A	N/A	N/A	N/A
Velvet 56	N/A	N/A	N/A	N/A
Circular Fisheye	N/A	N/A	N/A	N/A
Trio 28	N/A	N/A	N/A	N/A
Twist 60	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 50 Optic	N/A	N/A	N/A	N/A
Composer Pro II with Edge 50 Optic	N/A	N/A	N/A	N/A
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A
Discontinued				
Composer Pro with Sweet 35 Optic	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Composer Pro with Sweet 50 Optic	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Muse	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Scout	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Composer	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Control Freak	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M	Olympus 4/3 - AP/ M
Composer with Tilt Transformer	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.