

Fuji X Mirrorless Cameras				
Lensbaby Lens	X-T1* X-T2* X-T10* X-Pro1* X-Pro2*	X-E1* X-E2* X-E2S*	X-M1*	X-A1* X-A2* X-A3*
Velvet 56 SE	N/A	N/A	N/A	N/A
Velvet 56	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Circular Fisheye	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Trio 28	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Twist 60	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Sweet 50 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Edge 50 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A
Discontinued				
Composer Pro with Sweet 35 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro with Sweet 50 Optic	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M	Fuji X - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	N/A	N/A	N/A	N/A
Muse	N/A	N/A	N/A	N/A
Scout	N/A	N/A	N/A	N/A
Composer	N/A	N/A	N/A	N/A
Control Freak	N/A	N/A	N/A	N/A
Composer with Tilt Transformer	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.

	Panasonic Mirrorless Cameras					Olympus Mirrorless Cameras				
Lensbaby Lens	GH1	G5	GF5	GX1						OM-D E-M5
	GH2	G6	GF6	GX7						OM-D E-M5 MKII
	GH3	G7	GF7	GX7 MKII		E-PL1	E-PL5	E-P1	E-PM1	OM-D E-M1
	GH4	G10	GF1	GF7K	GX8	E-PL2	E-PL6	E-P2	E-PM2	OM-D E-M1 MKII
	GH4K	G80	GF2	GF7K	GX80	E-PL3	E-PL7	E-P3	PEN F	OM-D E-M10
		G85	GF3	GF8	GX85			E-P5	PEN E-PL8	OMD E-M10 MKII
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Velvet 56	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Circular Fisheye	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Trio 28	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Twist 60	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Composer Pro II with Sweet 50 Optic	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Composer Pro II with Edge 50 Optic	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Discontinued										
Composer Pro with Sweet 35 Optic	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Composer Pro with Sweet 50 Optic	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M
Muse	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Scout	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Composer	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Control Freak	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Composer with Tilt Transformer	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	N/A
Tilt Transformer	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	Micro 4/3 - AP/ M	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

Samsung NX Mirrorless Cameras

Lensbaby Lens	Galaxy NX NX Mini	NX10	NX100 NX210 NX300	NX300m NX310 NX500	NX1000 NX1100 NX2000 NX3000 NX3300	NX1
		NX11 NX20 NX30				
Velvet 56 SE	N/A	N/A	N/A	N/A	N/A	N/A
Velvet 56	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Circular Fisheye	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Trio 28	N/A	N/A	N/A	N/A	N/A	N/A
Twist 60	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro II with Sweet 35 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro II with Sweet 50 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro II with Edge 50 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro II with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A
Spark	N/A	N/A	N/A	N/A	N/A	N/A
Discontinued						
Composer Pro with Sweet 35 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro with Sweet 50 Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Composer Pro with Edge 80 Optic	N/A	N/A	N/A	N/A	N/A	N/A
Composer Pro with Double Glass Optic	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M	Samsung NX - AP/ M
Muse	N/A	N/A	N/A	N/A	N/A	N/A
Scout	N/A	N/A	N/A	N/A	N/A	N/A
Composer	N/A	N/A	N/A	N/A	N/A	N/A
Control Freak	N/A	N/A	N/A	N/A	N/A	N/A
Composer with Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A
Tilt Transformer	N/A	N/A	N/A	N/A	N/A	N/A

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

		Sony Alpha E Mirrorless Cameras			
Lensbaby Lens	NEX-3*	NEX-5N*		A5100*	
	NEX-3N*	NEX-5R*	A3000*	A6000*	A7*/A7 II*
	NEX-C3*	NEX-5T*	A3500*	A6300*	A7R* / A7R II
	NEX-F3*	NEX-6*	A5000*	A6500*	A7S* / A7S II
	NEX-5*	NEX-7*			
Velvet 56 SE	N/A		N/A		N/A
Velvet 56	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Circular Fisheye	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Trio 28	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Twist 60	Not Recommended		Not Recommended		Sony Alpha E - AP/ M
Composer Pro II with Sweet 35 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Sweet 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Edge 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Edge 80 Optic	N/A		N/A		N/A
Spark	N/A		N/A		N/A
Discontinued					
Composer Pro with Sweet 35 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro with Sweet 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro with Edge 80 Optic	N/A		N/A		N/A
Composer Pro with Double Glass Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Muse	N/A		N/A		N/A
Scout	N/A		N/A		N/A
Composer	N/A		N/A		N/A
Control Freak	N/A		N/A		N/A
Composer with Tilt Transformer	Sony NEX - AP/ M		Sony NEX - AP/ M		Sony NEX - AP/ M
Tilt Transformer	Sony NEX - AP/ M		Sony NEX - AP/ M		Sony NEX - AP/ M

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.