

		Sony Alpha E Mirrorless Cameras			
Lensbaby Lens	NEX-3*	NEX-5N*		A5100*	
	NEX-3N*	NEX-5R*	A3000*	A6000*	A7*/A7 II*
	NEX-C3*	NEX-5T*	A3500*	A6300*	A7R* / A7R II
	NEX-F3*	NEX-6*	A5000*	A6500*	A7S* / A7S II
	NEX-5*	NEX-7*			
Velvet 56 SE	N/A		N/A		N/A
Velvet 56	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Circular Fisheye	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Trio 28	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Twist 60	Not Recommended		Not Recommended		Sony Alpha E - AP/ M
Composer Pro II with Sweet 35 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Sweet 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Edge 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Edge 80 Optic	N/A		N/A		N/A
Spark	N/A		N/A		N/A
Discontinued					
Composer Pro with Sweet 35 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro with Sweet 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro with Edge 80 Optic	N/A		N/A		N/A
Composer Pro with Double Glass Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Muse	N/A		N/A		N/A
Scout	N/A		N/A		N/A
Composer	N/A		N/A		N/A
Control Freak	N/A		N/A		N/A
Composer with Tilt Transformer	Sony NEX - AP/ M		Sony NEX - AP/ M		Sony NEX - AP/ M
Tilt Transformer	Sony NEX - AP/ M		Sony NEX - AP/ M		Sony NEX - AP/ M

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work

M = Camera will only work in Manual Mode and in-camera light meter will not work.

* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.