

Sony Alpha E Mirrorless Cameras					
Lensbaby Lens	NEX-3* NEX-3N* NEX-C3* NEX-F3* NEX-5*	NEX-5N* NEX-SR* NEX-5T* NEX-6* NEX-7*	A3000* A3500* A5000*	A5100* A6000* A6300* A6500*	A7* / A7 II* A7R* / A7R II* A7S* / A7S II* A9*
Burnside 35	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Velvet 56 SE	N/A		N/A		N/A
Velvet 56	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Velvet 85	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Circular Fisheye	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Trio 28	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Twist 60	Not Recommended		Not Recommended		Sony Alpha E - AP/ M
Composer Pro II with Sweet 35 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Sweet 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Sweet 80 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro II with Edge 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Spark	N/A		N/A		N/A
<b>Discontinued</b>					
Composer Pro II with Edge 80 Optic	N/A		N/A		N/A
Composer Pro with Sweet 35 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro with Sweet 50 Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Composer Pro with Edge 80 Optic	N/A		N/A		N/A
Composer Pro with Double Glass Optic	Sony Alpha E - AP/ M		Sony Alpha E - AP/ M		Sony Alpha E - AP/ M
Muse	N/A		N/A		N/A
Scout	N/A		N/A		N/A
Composer	N/A		N/A		N/A
Control Freak	N/A		N/A		N/A
Composer with Tilt Transformer	Sony NEX - AP/ M		Sony NEX - AP/ M		Sony NEX - AP/ M
Tilt Transformer	Sony NEX - AP/ M		Sony NEX - AP/ M		Sony NEX - AP/ M

AP/ M = Camera will work in Aperture Priority Mode or Manual Mode and in-camera light meter will work  
M = Camera will only work in Manual Mode and in-camera light meter will not work.

\* These cameras have a shutter lock that will need to be turned off. To disable the shutter lock go to the Shooting Menu on your camera, select Shoot Without Lens and select enable.