

PENTAX®


LXファインダーシステムの使い方 LX INTERCHANGEABLE VIEWFINDERS

使用説明書

ファインダー交換の方法

ファインダーをはずすとき

カメラのファインダーロックレバーを→の方向に押しながらファインダーを⇨の方向へ静かに引いてはずします。

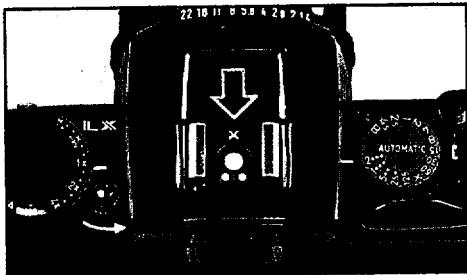

Before attaching your new LX Interchangeable Viewfinder to the camera, remove the existing Viewfinder by moving the finder release lever counter-clockwise and sliding the unit away from the camera as shown (for cameras not equipped with a finder, remove the protective body cap in the same manner). When removing a finder, be sure to slide it very carefully and slowly so as to avoid dropping it. After removal, cover it with the protective finder base cap to protect against dust and scratches.

Attaching the new finder: Align the finder with the body, making sure it matches up with the

ファインダーをつけるとき

⇨のミゾを左右とも合わせ、ファインダーをさし込み⇨の方向に止まるまで押します。止まった後、逆方向に引いてロックされたことを確認してください。



grooves properly as shown. Then, slide it slowly and smoothly toward the front of the camera until it locks firmly in place. When attaching a finder it's a good idea to jiggle it to make sure that it is securely attached.

IMPORTANT: Avoid touching the glass surfaces of the finder, eyepiece and camera body when attaching or removing the finder to protect against possible damage from fingerprints, dust, grit and grease. When absolutely necessary, use a blower or camel's hair brush to remove loose dust or grit and ensure the brightest, cleanest image.

視度の合わせ方

FA-1・FA-1W・FA-2の視度調節は1図のようにファインダーを途中まで取りつけ、ファインダーを見ながら視度調節ダイヤルを視度アジャスターで回します。2図のクロスマイクロの線がはっきり見えるように合わせます。

FD-1・FE-1は接眼部鏡胴を回して合わせます。


システムファインダーの使い方

● ベースマウントキャップの使い方 [3 図]

FB-1のベースマウントキャップは左に回すとはずれます。取りつけるときは赤と白のマークを合わせてマウントに押しつけ、右に止まるまで回します。

● アイピースの取り付け [4 図]

赤いマークを合わせてマウントに押しつけなが

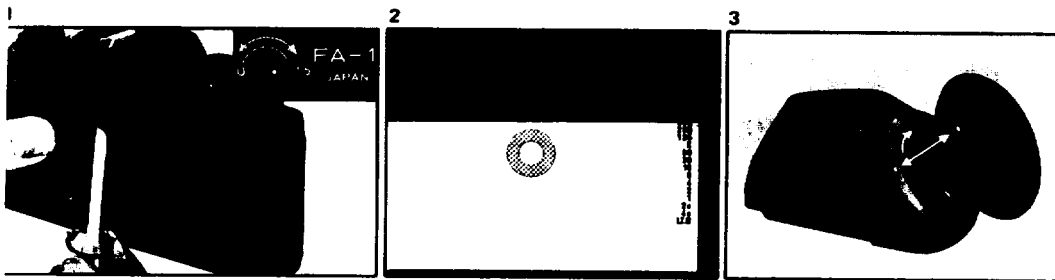

Pentax FA-1, FA-1W and FA-2 Eye-Level Finder Models: The three FA Series finder models offer built-in diopter correction, a unique feature for an eyelevel finder. To adjust the diopter to suit your vision, first move the finder release lever counter-clockwise and gently slide the finder away from the body, until the diopter adjustment screw is visible.

Then, with the finder in this position, bring the camera up to your eye and point it toward a light colored surface or wall. Using the tool packed with the finder, turn the adjustment screw as shown in Fig. 1 until the border lines of the center spot come in sharp and crisp (Fig. 2). Remove the tool and slide the finder toward the front of the camera

body once again to lock it securely in place. Additional correction is possible using SMC correction lenses which fit over the viewfinder eyepiece. Check your eye doctor for the diopter range best suited for your needs.

FE-1 Magni-Finder, FD-1 Magni-Eyepiece: Both the FE-1 Waist-Level Finder and the FD-1 Magni-Eyepiece for the System Finder also feature built-in diopter correction. To adjust the degree of diopter with either unit, simply rotate the eyepiece ring until the image comes in sharply.

FB-1 System Finder and Eyepieces

The LX's versatile System Finder consists of the FB-1 Finder Base unit (Fig. 3) and three optional

ら右に回すとカチッと音がしてロックされます。はずすときは 5 図のアイピースロックボタンを押して左に回します。アクションアイピースFC-1はウエストレベルの状態ではずします。


● アクションアイピースの操作(6 図)

アイピース部を右に半回転するとアイレベルに、左に半回転するとウエストレベルになります。

ウエストレベルファインダーの使い方

上部カバーを持ち上げると開きます。ルーペを出すときは、カバー裏のスプリングを前へ押しします。

たたむときは、ルーペのそばのボタンを押してルーペをたたみ、上部カバーを閉じます。

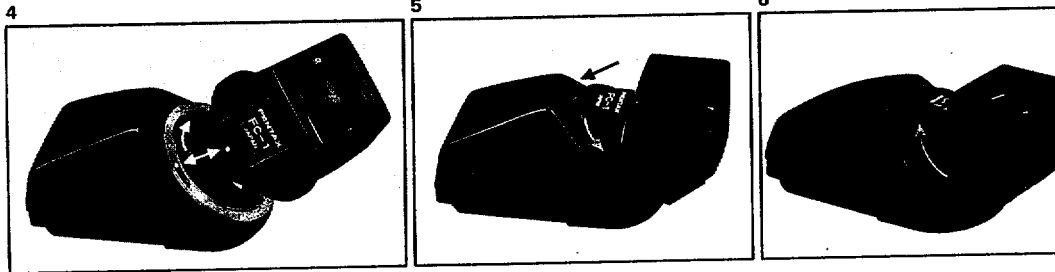

viewing eyepieces. All three of the eyepieces bayonet mount to the base unit.

To attach the eyepiece: First remove the eyepiece mount cap from the base unit by turning it counter-clockwise until it separates from the mount (Fig. 3). Then, align the red index dot on the rim of the eyepiece with that on the mount (Fig. 4).

Seating the eyepiece against the mount, rotate it clockwise until it clicks in place with a click (the red index on the rim of the eyepiece will be on an exact vertical plane).

To remove the eyepiece: Press the eyepiece lock release button shown in Fig. 5 and turn the eyepiece counter-clockwise until it separates from the mount.

FC-1 Action Eyepiece: When removing the Action Eyepiece, first position it for waist-level viewing. The eyepiece rotates counter-clockwise for waist-level viewing, and clockwise for eye-level viewing.

FF-1 Waist-Level Finder: Raise the top cover of the finder and fold it out for viewing. When you wish to use the magnifier, push the spring at the rear of the cover forward.

To close the finder, press the button adjacent to the magnifier and fold in the magnifier, then fold the top cover over it.



Asahi Optical Co. Ltd. C.P.O. Box 104991, Tokyo 104, JAPAN
 Pentax Europe n.v. Neuveldlaan 35, 1930 Zaventem, BELGIUM
 Pentax Handelsgesellschaft mbH Postfach 54 0169, 2000 Hamburg 54, WEST GERMANY
 Pentax U.K. Limited Pentax House, South Hill Avenue, South Harrow, Middlesex HA2 0LT, U.K.
 Pentax France S.A. Z.I. Argenteuil, 12, Rue Ambroise-Croizat, 95100 Argenteuil, FRANCE
 Pentax (Schweiz) AG Industriestrasse 2, 8305 Dietlikon ZH, SWITZERLAND
 Pentax Scandinavia AB Box 650, S-751 27 Uppsala, SWEDEN
 Pentax Nederland Spriveld 25, 4815 HR Breda, THE NETHERLANDS
 Pentax Norge A.S. Cecilie Thoresens Vei, Lambertseter, 1101 Oslo 11, NORWAY
 Pentax Corporation 35 Inverness Drive East, Englewood, Colorado 80112, U.S.A.
 Pentax Canada Inc. 3131 Universal Drive, Mississauga, Ontario L4X 2E5, CANADA
 Asahi Optical Brasileira Ind. e Com. Ltda. Rua Capirão Antonio Rosa 376, Sala 121 Ed. PBK, São Paulo, BRASIL

8/89 Printed in Japan

形式 Type	視度 Diopter Range	倍率 Magnification	幅×高×厚 W x H x D	重さ Weight	備考 Notice
FA-1 Eye-Level Finder	-1.5 ~ 0	0.9	52 x 36 x 56 mm	95g	正立正像
FA-1w Eye-Level Finder	-3 ~ +1	0.84	52 x 36 x 56	95	
FA-2 Eye-Level Finder	-1.5 ~ 0	0.9	52 x 36 x 54.5	86	
FB-1 System Finder Base	—	—	52 x 40.5 x 78	130	
FC-1 Action Eyepiece	-0.95	0.55	52 x 47 x 49	130	
FD-1 Magni-Eyepiece	-4.5 ~ +3.5	0.95	φ49.5 x 41.5	140	
FD-2 Standard Eyepiece	-1	0.84	φ49.5 x 16.5	50	左右逆像
FE-1 Magni-Finder	-5 ~ +4	1.35	52 x 55 x 50	150	
FF-1 Waist-Level Finder	-1.1	1.05	52 x 31.5 x 50	60	

相対照像鏡非可変型は1.5、0.84、0.55倍率を有し、ピントセンターで取換えてお使い可 (有付)

① -3 ~ +1.5, ② 0 ~ +1.5, ③ +1.5 ~ +3

• The image is laterally reversed with the FE-1 and FF-1 Finder models.



旭光学工業株式会社

〒114 東京都板橋区前町2丁目36番9号 (株)03(51)511(代)

旭光学商事株式会社

〒100 東京都千代田区永田町1丁目11番1号 (株)03(20)511(代)

●お問い合わせは次の各サービス窓口へ

ペンタックスフォーラム	T183 東京都板橋区西新町2丁目1番1号 新館三井ビル(付設)	☎ 03(57)82941 (代)
東京サービスセンター	T104 東京都中央区高島町西丁目10番地	☎ 03(57)36221 (代)
札幌サービスセンター	T000 札幌市中央区大通西2丁目1番1号 朝日生命札幌大層ビル	☎ 011(24)38742 (代)
仙台サービスセンター	T080 仙台市青葉区中央2丁目2番10号 札幌生命	☎ 022(28)36881 (代)
新潟サービスセンター	T051 新潟市本町通七番町1153番地 日本信販新潟ビル	☎ 025(224)83891 (代)
横浜サービスセンター	T231 横浜市中区老母町1丁目8番9号 横浜工クセント7ビル	☎ 045(881)8771 (代)
神戸サービスセンター	T420 神戸市兵庫区24番2号 住友ビル	☎ 05(42)553308 (代)
名古屋サービスセンター	T461 名古屋市中区東1丁目19番8号	☎ 052(882)3331 (代)
金沢サービスセンター	T920 金沢市福寿町2丁目8番23号 太陽生命ビル	☎ 0762(22)30501 (代)
大宮サービスセンター	T542 大宮市中央区梅田町1丁目17番9号	☎ 08(271)7988 (代)
広島サービスセンター	T730 広島市中区大馬場3丁目7番2号 大東京火災広島ビル	☎ 082(248)4321 (代)
福岡サービスセンター	T810 福岡市博多区中洲中島町5番2号	☎ 082(281)8898 (代)
●消費者相談室	T104 東京都中央区銀座西8丁目10番地	☎ 03(572)8479

58503

☆記載内容の仕様などの一部が変更される場合があります。 07-8908